

- 1- System On/Off
Sequentially turns on/off ALL components that are associated with the remote.
- 2- Power
Individually turns on/off devices such as the TV or set-top box
- 3- TV
Select to control the functions of the TV, such as volume.
- 4- STB (Set-top-box)
Select to control the function of the STB and Skitter TV
- 5- Guide
View all subscribed channel information
- 6- Menu
View main menu
- 7- Info
View current program information
- 8- Exit
Exits screen, returns to current channel
- 9- OK/SEL
Press to select current option
- 10- Page +/-
Only available in the guide
- 11- Directional arrows
- 12- A, B, C, D
A - Press once to access guide, press second time to access favorite channels
B - Return or back
C - Channel information
D - HELP




- 13- Channel up/down
Select next channel up or down
- 14- Volume up/down
Increase or decrease volume level of TV
- 15- MUTE
Mute the sound from the TV
- 16- LAST
Go back to the previous channel
- 17- VIDEO SOURCE
Select the input on your TV
- 18- LIGHT
illuminates the remote buttons

DVR Controls
(See reverse for more information)



- MY DVR-Access your recordings
- REPLAY-Return the start of your program
- SKIP-Move forward 30 seconds
- REW-Rewind at 5 different speeds
- PLAY-Play the selected program
- FF-Fast forward at 6 different speeds
- STOP-Stop the selected program
- PAUSE-Pause live or recorded programs
- REC-Press to begin recording a program

DVR REMOTE GUIDE

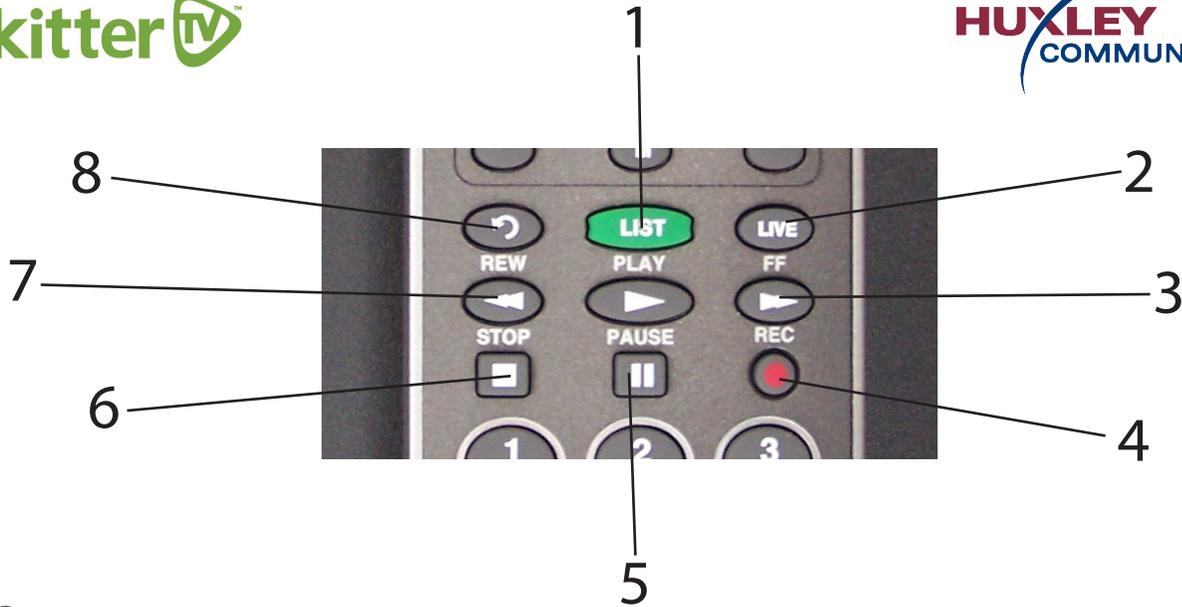

1-My DVR

Press this button to instantly view a current list of your recorded programs. Here you can view, edit, and delete your stored programs.

2-SKIP BUTTON

Press this button to 'skip' forward 30 seconds

3-FAST FORWARD BUTTON

Press this button to fast forward through a recorded program. There are 6 different speed levels you can select.

4-RECORD BUTTON

Press this button to begin recording a program to be stored on your DVR for future viewing.

5-PAUSE BUTTON

Press this button to pause the live program you are viewing or to pause a recorded program.

6-STOP BUTTON

Press this button to stop watching your recorded program. You can return to your program at any time by going to the MY DVR list.

7-REWIND BUTTON

Press this button to rewind a recorded program. There are 5 different speed levels you can select.

8-REPLAY BUTTON

Press this button to instantly rewind 30 seconds.

9-RESTART TV

This service allows you to Restart a TV program that is already in progress. Or if you are browsing channels and see a show you wanted to watch that has already begun, you can Restart it and watch it from the beginning by going back up to 3 hours.